
Home Videos → Products → Service → Tires → Safety → Find a dealer →

#### **SERVICE FOCUS**

## Powertrain - FWD/RWD

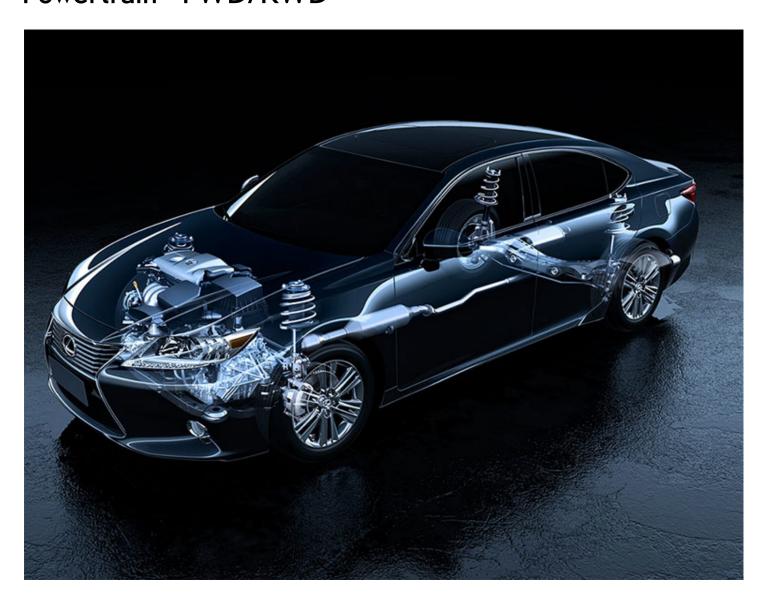

## Driveshaft

Performs three functions:

- Changes the direction of the driving power.
- Final gear reduction.

## **Differential**

Transmits power from the differential to the wheel.

• Allows drive wheels to rotate at different speeds when cornering.

#### Transaxle

A transaxle is a transmission and differential combined into one unit, used in front-wheel drive vehicles.

# Clutch

The clutch either transmits or isolates the power from the engine to the transmission.

#### Transmission

Uses gears to transmit power from the engine to the drive wheels. Selecting different gears changes the amount of power and torque transmitted.

#### Propeller shaft

On front engine rear-wheel drive vehicles, the propeller shaft transmits power from the transmission to the differential.