

## PRODUCT FOCUS

## Genuine Air Filters

**When to replace?**

Remove and inspect every 6 months or 8,000 kilometres and replace as needed.

- **Proper Balance:** Of efficient filtration and unrestricted air flow.
- **Quality Materials:** Made from a non-woven cloth.
- **Multi-Layered Element:** Incorporating coarse, medium and fine filters, traps particles of different sizes and resists clogging for long service life.

**What do they do?**

- Air filters help prevent harmful particles from entering your engine and causing damage.
- Cleans up to 24,000 litres of air per hour when driving at 60 km/h.

**When to service?**

- Air filters eventually become clogged with trapped particles and as a result this will reduce engine performance.

- **Exact Fit:** Ensure proper sealing which is essential in keeping dirt out of your engine.

- A clogged filter starves your engine for air, reducing fuel economy and increasing emissions.